

Wagon Stroller Assembly

**Safety,
Assembly
&
Operating
Instructions
Model # WGNST**



Go-Go Babyz Corporation




WARNINGS + GENERAL SAFETY INFORMATION

Please read these instructions carefully prior to assembly and use. Keep these instructions for future reference. The Wagon Stroller is suitable for use with one or two children between 3 months and 36 months, when equipped with Go-Go Babyz custom seats and safety harness. The maximum combined weight for two children using the custom seats and safety harness is 78 pounds. HOWEVER, the Wagon Stroller may be used by older children when used in the wagon cart mode.


 **WARNING** NEVER LEAVE CHILD UNATTENDED. FAILURE TO FOLLOW THESE WARNINGS AND INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

 **WARNING** TO AVOID SERIOUS INJURY FROM SLIDING OR FALLING OUT, ALWAYS USE COMPLETE 5-POINT HARNESS. AUDIBLE “CLICK” MUST BE HEARD TO CONFIRM THAT EACH SEAT IS CONNECTED PROPERLY.

- THIS STROLLER IS SUITABLE FOR CHILDREN FROM 3 MONTHS UNTIL CHILD IS 39 LBS (17.7 KG), AND CHILD HEIGHT IS 60” (152.4 CM) OR A COMBINED WEIGHT FOR TWO CHILDREN OF 78 POUNDS (35.38 KG).
- THE BRAKE MUST BE LOCKED WHILE TAKING THE CHILD IN OR OUT OF THE STROLLER, AND WHEN PARKED.
- AUDIBLE “CLICK” MUST BE HEARD IN ORDER TO DETERMINE THAT EACH SEAT LOCK AND FRAME LOCK IS IN THE PROPER POSITION. TO ENSURE PROPER LOCKING ENGAGEMENT, CHECK TO SEE THAT THE FABRIC CANNOT BE DISENGAGED FROM THE WAGON STROLLER WITHOUT UNLOCKING THE DEVICE

 **WARNING** CHILDREN AND ADULTS SHOULD BE CLEAR OF MOVING PARTS WHILE MAKING STROLLER ADJUSTMENTS. DAMAGE TO FINGERS OR EXTREMITIES MAY OCCUR WHEN OPENING OR CLOSING THE FRAME.

- NEVER LEAVE CHILD IN THE STROLLER WHILE ASCENDING OR DESCENDING STAIRS, OR USING AN ESCALATOR.
- DO NOT MAKE ANY ALTERATIONS OR MODIFICATIONS TO THE STROLLER WITH PRODUCTS NOT SUPPLIED BY THE MANUFACTURER AS THIS MAY CAUSE INSTABILITY OR STRUCTURAL DAMAGE NOT COVERED UNDER WARRANTY.

 **WARNING** THIS IS NOT A JOGGER. DO NOT USE THIS PRODUCT WHILE RUNNING, JOGGING, IN-LINE SKATING OR SIMILAR ACTIVITIES.

⚠ WARNING UNIT MAY BECOME UNSTABLE IF MANUFACTURER'S RECOMMENDED LOAD IS EXCEEDED, OR IF PARCEL BAG OR ACCESSORY OTHER THAN THAT RECOMMENDED BY THE MANUFACTURER IS USED OR HUNG FROM THE UNIT.

⚠ WARNING CHILD'S MOVEMENT CAN SLIDE WAGON. NEVER PLACE WAGON NEAR ELEVATED SURFACES.

⚠ WARNING NEVER USE THE WAGON STROLLER AS A MEANS TO TRANSPORT AN INFANT IN A MOTOR VEHICLE.

⚠ WARNING DO NOT PERMIT OTHER CHILDREN TO PLAY UNSUPERVISED NEXT TO THE WAGON STROLLER.

⚠ WARNING DO NOT USE THE WAGON STROLLER IF IT IS DAMAGED OR BROKEN.

⚠ WARNING OPEN FLAMES AND OTHER SOURCES OF HEAT, SUCH AS ELECTRIC HEATERS, GAS OVENS, ETC. IN THE IMMEDIATE VICINITY OF THE WAGON STROLLER ARE DANGEROUS AND SHOULD BE AVOIDED.

⚠ STRANGULATION WARNING STRINGS CAN CAUSE STRANGULATION! DO NOT PLACE WAGON STROLLER WITH STRINGS AROUND A CHILD'S NECK, SUCH AS HOOD STRINGS OR PACIFIER CORDS. DO NOT SUSPEND STRINGS OVER THE WAGON STROLLER OR ATTACH STRINGS TO TOYS.

- INFANTS CAN SUFFOCATE IN GAPS BETWEEN AN EXTRA PAD AND SIDE OF WAGON, OR ON SOFT BEDDING. NEVER ADD A MATTRESS, PILLOW, COMFORTER OR PADDING.
- IF A SHEET IS USED WITH THE WAGON, USE ONLY THE ONE PROVIDED BY THE MANUFACTURER OR ONE SPECIFICALLY DESIGNED TO FIT THE DIMENSION OF THE WAGON.
- DO NOT ALLOW ANY PART OF THE WAGON STORAGE AREA TO COVER A CHILD'S NOSE OR MOUTH.
- TO REDUCE THE RISK OF SIDS PEDIATRICIANS RECOMMEND HEALTHY INFANTS BE PLACED ON THEIR BACKS TO SLEEP, UNLESS OTHERWISE ADVISED BY PHYSICIAN.

PARTS

- HANDLE(S)
- REAR BRAKE ASSEMBLY
- FOLDING FRAME WITH CARGO FABRIC
- REAR WHEELS (2)
- OPTIONAL 5-POINT HARNESS SEAT(S)

Wagon Stroller Shown with Extended (Telescoping) Push Handle, Pull handle and Two Seats.



Go-Go Babyz reserves the right to make design changes and improvements to any of our products as part of our commitment to innovation.

ASSEMBLY

Remove contents from box.

REAR WHEELS AND BRAKE BAR

1. Install rear wheels onto the axle located on the rear brake & suspension assembly.
2. Make sure each wheel clicks into place and locks onto the axle. Give each wheel a tug to confirm.
3. Open wagon by pulling on each end of the frame, then push down in the center of the cargo area until the wagon snaps into place.
4. Install the rear wheel assembly to the wagon frame:
 - a. Align the rear wheel assembly so the axle faces the front and the brake bar faces the rear.
 - b. Secure rear wheel assembly to frame by aligning with the outer tubes on frame (located on either side of the frame).
 - c. Push down on the outer tubes on each side until they snap and lock.
 - d. Check by confirming the metal spring button has locked into rear wheel assembly.



HANDLE

ADD YOUR PUSH HANDLE

1. Install either the Straight or Extended Telescoping Handle by pressing in the metal spring buttons on each side of handle and insert in to open tubes on rear of frame.
2. Continue until desired height is achieved, making sure the spring buttons lock into the tube through the lock holes.



SAFETY BUCKLES

In order to maintain the integrity of the restraining system and Maintain Occupancy Retention in the event of the stroller tipping over, the buckles on the bottom of the cargo area must be attached around the frame as shown There are 8 buckles located on the outside of the cargo fabric.

Please clip buckles around the metal frame of your wagon when wagon is open. Buckles must be released prior to folding your wagon.



TO FOLD YOUR WAGON

1. Release Safety Buckles from the frame.
2. Pull-up on the center pull handle.
3. Front pull handle will automatically release from the upright position.

⚠ WARNING CHILDREN AND ADULTS SHOULD BE CLEAR OF MOVING PARTS WHILE MAKING STROLLER ADJUSTMENTS. DAMAGE TO FINGERS OR EXTREMITIES MAY OCCUR WHEN OPENING OR CLOSING THE FRAME.



4. Bring top carry handles together and close with velcro.



OPTIONAL 5-POINT HARNES SEATS:

⚠ WARNING TO AVOID SERIOUS INJURY FROM SLIDING OR FALLING OUT, ALWAYS USE COMPLETE 5-POINT HARNESS. AUDIBLE “CLICK” MUST BE HEARD TO CONFIRM THAT EACH SEAT IS CONNECTED PROPERLY.

• THIS STROLLER IS SUITABLE FOR CHILDREN FROM 3 MONTHS UNTIL CHILD IS 39 LBS (17.7 KG), AND CHILD HEIGHT IS 60” (152.4 CM) OR A COMBINED WEIGHT FOR TWO CHILDREN OF 78 POUNDS (35.38 KG).

TO INSTALL THE SEAT(S)

Place seat with backrest against the Wagon Stroller frame. Attach the four buckles on the seat to the receiving buckles already sewn onto the frame of the wagon. If reclining, keep top buckles in the top position and adjust bottom buckles to the next set of buckles, near the middle of the frame. Always pull on the seats to make sure the buckle is locked.



TO ADJUST SEAT HARNESS

STEP 1: Detach adjustment clip from upper or lower harness attachment clip

TO LOCK: Slide both belt ends together until it locks.

TO OPEN: Depress button at center and pull apart.

TO LOCK SEAT HARNESS

TO LOCK: Slide both belt ends together until it locks.

TO OPEN: Depress button at center and pull apart.

TO LOCK THE BRAKE:

STEP 1: Brake Bar is located between the rear 12" wheels. Push down on the brake bar with foot to lock.

STEP 2: Attempt to push stroller back and forth to ensure brake is engaged.
TO RELEASE BRAKE: Push the brake bar up. again.

SPECIAL NOTES

When transporting your wagon stroller, you can fully remove the extended handle or you can remove and rotate it so that the handle curves above the wagon, rather than sticking out.

The wagon stroller pull handle may be removed. If you would like to have your pull handle removed, please contact us at 888.686.2552 or info@gogobabyz.com.



LIMITED WARRANTY

Your Go-Go Babyz Wagon Stroller is warranted to be free from any manufacturing defects for a period of 1 year from the date of purchase under normal use and in compliance with the operating instructions.

This warranty cannot be extended and an extended warranty cannot be purchased.

This warranty is not transferable and extends only to the original retail purchaser and is only valid when supplied with proof of purchase. **PLEASE RETAIN PROOF OF PURCHASE FOR THIS LIMITED WARRANTY WITH PURCHASE DATE.**

The warranty is valid only in the original country of purchase. This warranty is subject to the conditions set forth by country in which the items were purchased. Conditions may vary. Go-Go Babyz will not ship replacement or repair parts out of the country of purchase.

Go-Go Babyz will provide replacement parts or conduct repairs as determined fitting by the company. Go-Go Babyz reserves the right to exchange item with a replacement part. Some parts may be replaced with newer model parts as the Wagon Stroller is improved over time.

Please note that a repair issue will NOT be covered by this warranty if:

- The issue is caused by misuse or poor maintenance. Please refer to this instruction booklet for guidance on wagon stroller use and maintenance.
- Damage is caused by improper installation of Go-Go Babyz parts and/or accessories or if damage is due to the weight limit being exceeded.

Please refer to this instruction booklet for guidance on stroller assembly and use.

- Damage is corrosion, mold or rust caused by lack of maintenance or service.
- Damage is due to general wear and tear, which is the result of everyday use or negligence.

- Damage is caused by sun intensity, sweat, detergents, damp storage or frequent washings.
 - Repairs or modifications are carried out by a third party.
 - Stroller is purchased from an unauthorized retailer.
- Approved retailers are listed on our website at www.gogobabyz.com.
- Stroller is second-hand.
 - Stroller is damaged as a result of an accident, airline or freight damage.

Go-Go Babyz reserves the right to determine if warranty terms and conditions have been met.

Please contact Go-Go Babyz if you have any questions regarding warranty.

Register your Wagon Stroller online at www.gogobabyz.com.

Go-Go Babyz Corporation

16885 Joleen Way, Unit 125

Morgan Hill, CA 95037

Toll Free: 888-686-2552

Email: info@gogobabyz.com

www.gogobabyz.com



FRAME AND FABRIC CARE:

- Clean frame with a damp cloth and a mild detergent and dry thoroughly. Do not use abrasives.
- If the stroller chassis parts have been exposed to salt water we recommend that they be rinsed with fresh (tap) water as soon as possible to avoid corrosion. Always dry frame if wet.
- All fabrics are removable.
- For removable fabrics, hand wash in cold water with mild detergent. Air dry completely and away from direct sunlight before re-use or storage.
- The base fabric may be sponged lightly using a damp cloth and a mild detergent. Allow to dry completely before re-use or storage.
- To extend the life of your Wagon Stroller fabric, keep it clean and do not leave it in direct sunlight for long periods of time.
- Do not fold or store the Wagon Stroller if it is damp or wet, nor store in a damp environment.

MAINTENANCE AND REPAIR:

- This stroller requires regular user maintenance. Regularly check all connecting hardware (rivets, screws, etc.) for tightness and security.
- Inspect your Wagon Stroller periodically. Seek prompt repairs, replacing worn or broken parts as needed. Check all safety devices, locks and harnesses, for correct and secure operation. Never continue to use a product that is structurally unsound.
- Only Go-Go Babyz replacement parts should be used. It may be unsafe to use parts supplied by another manufacturer.
- Contact Customer Service with any repair questions.

